

Included

PMN-1 | Mini-Indoor Optical Node

PMN-1 Owners Manual

Please read this manual thoroughly before use.
Keep this manual handy for future reference.

Visit Our Web-Site www.picomacom.com
Contact Us **858.546.5050**
Toll Free **800.421.6511**

PMN-1 Mini-Indoor Optical Node OWNERS MANUAL

This manual is intended for use by purchasers of Pico Macom **PMN-1** Mini-Indoor Optical Node(s) and their qualified technicians. This document is the property of Pico Macom and embodies proprietary subject matter. All design, manufacture, reproduction, use and sale rights regarding the same are expressly reserved. This manual may not be reproduced without written consent from **Pico Macom**. All copyright, patent and trade secrets for this manual, the product, and its included software are expressly reserved by **Pico Macom**.

SAFETY CONSIDERATIONS



CAUTION
RISK OF ELECTRICAL SHOCK
Do Not Open



Avis – Risqué de choc électrique Ne Pas Ouvrir

For user safety, one or more of the caution labels shown here may be affixed to the side or rear panels of this equipment. The significance of the two symbols enclosed by triangles is described below.



This symbol means that dangerous voltages are present within the equipment. These voltages are not insulated and may be of sufficient strength to cause serious bodily injury if touched. This symbol may also appear on schematics.



This symbol calls attention to a critical procedure or means that refer you to the instruction manual for operating or service information. Only qualified service personnel are to install or service the equipment. This symbol may also appear in text and on schematics.

WARNING: To reduce the risk of fire or electrical shock, do not expose this equipment to rain or moisture.

IMPORTANT SAFEGUARDS

Pico Macom strongly advises you to read and understand the following safety instructions prior to installing and operating this equipment.

- **Read These Instructions First.** All safety and operating instructions should be read before installing or operating this equipment. Safety and operating instructions should be retained for future reference.
- **Retain This Instruction Manual** Safety and operating instructions should be retained for future reference.
- **Heed Warnings** All warnings on the equipment and in this Owner's Manual should be adhered to.
- **Ventilation** Do not block or cover openings in this equipment. These are provided for ventilation and protection from overheating. **Maximum operating ambient temperature is 40°C.**
- **Power Sources** Operate this equipment only from the type of power source indicated on the rear panel.
- **Grounding or Polarization** This equipment may be equipped with a polarized AC line plug (a plug having one blade wider than the other or a different shape.). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug into the outlet, try reversing the plug. If the plug still does not fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of a polarized plug.
- **Servicing** Refer all servicing to qualified personnel. Opening or removing covers may expose dangerous voltages. When replacement parts are required, make sure the service technician uses only replacement parts recommended by Pico Macom. Unauthorized substitutions may result in fire, electric shock, or improper operation of the unit.
- **Cleaning** Unplug the unit from the AC power outlet before cleaning. Do not use liquid or aerosol cleaners.
- **Lightning.** For added protection during a lightning storm or when the equipment is left unattended or unused for long periods, unplug it from the power outlet and disconnect the cables between the equipment and the antenna subsystem. These precautions will prevent damage to the equipment that could be caused by lightning strikes or power line surges.
- **NOTE TO CATV SYSTEM INSTALLERS:** This reminder is provided to call your attention to NEC Articles 810-21, 820-22, and 820-40 that provide guidelines for proper grounding. In particular, these articles specify that the cable ground shall be connected to the building grounding system, as close to the point of cable entry as practical.
- **Optical Output Safety, General.** 1310nm Optical Transmitter units may emit harmful invisible laser radiation. These products may emit harmful laser radiation if powered on and the case is opened or the beam path is exposed.

Laser Safety Information:



The **PMN-1** Mini-Indoor Optical Node Transmitter modules are classified as Class 1M per IEC/EN 60825-1/A2:2001. This product complies with FDA/CDRH, 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50 dated 26 July, 2001.

Viewing the laser output with certain optical instruments (for example, eye loupes, magnifiers and microscopes) within a distance of 100 mm may pose an eye hazard. Laser power up to 20 mW at 1310 nm could be accessible if optical connector is open or fiber is broken. Lasers are on (powered) when ever the DLC chassis is powered

CAUTION: *Use of controls, adjustments, and procedures other than those specified herein may result in hazardous laser radiation exposure.*


TABLE OF CONTENTS

Chapter 1 Introduction	6
1. Introducing the Pico Macom PMN-1 Mini -Indoor Optical Node	6-7
2. Features.....	7
Chapter 2 Specifications	8
1. Receiver Optical Performance	8
2. Receiver RF Performance	8
3. Reverse RF Performance.....	8
4. Reverse Optical Performance	9
5. General.....	9
Chapter 3 Installation and Operation	10
1. Unpacking the Unit.....	10
2. Before Mounting	10
3. Mounting	10
3.1 Spacing and Cooling.....	10
4. Making Connections	11
4.1 Power Adapter Connection and Initial Power Up.....	11
4.2 Forward Fiber Connection	12-13
4.3 Cox Connection	13
4.4 Return Optical Connection	14
5. Maintenance.....	15
Chapter 4 Block Diagram	16
Warranty	17

Chapter 1

Introduction

1. Introducing the PMN-1 Mini-Indoor Optical Node

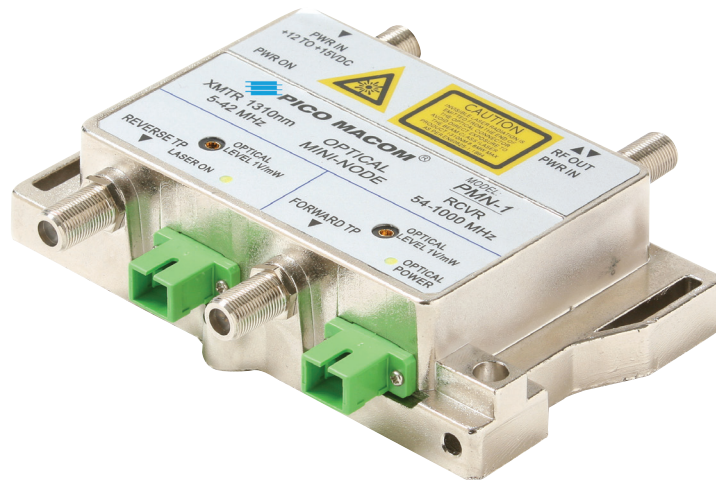

The **PMN-1** is a two way optical node with a downstream (forward) signal path and a return signal path. The downstream signal path includes an optical receiver followed by RF circuitry to extract and amplify the signal from the optical receiver into a coax cable connector. The return (reverse) signal path accepts signals from the coax in the 5-42 MHz range and dplexes these signals into the return laser transmitter. The **PMN-1** is an ideal platform for delivering video (analog NTSC channels or digital QAM channels or a mixture of both) as well as high-speed data services over today's advanced hybrid fiber/coax (HFC) networks. The small size makes it ideal for installations serving apartment blocks, corporate campus buildings or similar where there is an indoor location and nearby AC power. The low cost allows fiber deep dedicated node-to-customer-solutions where high bandwidth is dedicated to a commercial user or situations where coax noise ingress would be a problem. Despite its small size, the **PMN-1** includes superior proven technologies in both RF amplifier and optical components to provide the full complement of functions required by advanced networks.

The **PMN-1** receiver accepts one single mode fiber with a SC/APC connector with optical signals in the 1290-1600 nm wavelength range, making the PMN-1 suitable for common optical network systems. The forward signal may include a RF signals from 53 to 1000 MHz, allowing for future bandwidth expansion or for installations such as corporate sites that need to carry today's broadband spectrum of 54 to 860 MHz and additional channels for that particular site's needs in narrowcast channels positioned above 860 MHz. A LED lights when an optical signal is present for your use as a simple monitor. A test point is provided to monitor optical signal level, with 1V/mW scaling.

The **PMN-1** RF amplifier uses GaAs technology to provide 25 dBmV to the RF output port and the -20dBc output monitoring port with superior return loss, CSO, CTB performance. In an example apartment application, the PMN-1 and splitters without an additional launch amplifier can provide up to 64 devices (televisions, modems, set top boxes) with some margin to share for coax loss.

The **PMN-1** return transmitter provides a 1310 nm optical signal with 5 to 42 MHz RF bandwidth at 0 dBm output power. A reverse test port provides RF signals which are -20 dB from the 5~42 MHz signals on the coax connected to the RF Out F-connector. The **PMN-1** uses SC/APC connectors for the return path optical signal output. A LED lights when the receiver power is present for simple monitoring use. A test point is provided to monitor optical signal level, with 1V/mW scaling.

The **PMN-1** operates from a 12 to 15 VDC external source. That power may be carried on the RF output coax into the PMN-1 if a remote powering solution is needed. The typical approach is to use the 120 or 240 VAC AC power adaptor included with the node and supply power directly to the PWR IN port. The node may be mounted where convenient for fiber and RF coax wiring and with the power adaptor located at a local wall socket power source. The use of F-connectors on the PMN-1 and the power adaptor allow the installer to use coax cable, connectors, connector tools, and retaining clips to make custom installations of the length and routing needed using tools and components already in hand. The PMN-1 typically uses only 5 watts or less for all functions. The typical installation would be a wall mounting with slots provided on both sides of the node's housing for a #8 ~#10 screw and washer; the lightweight makes a two screw installation simple.

This manual details the unit specifications, describes any issues that may be critical to your installation, discusses the operation, and, finally, outlines actions if you have problems with the unit. If you read and follow the installation and operation chapters, the PMN-1 should provide you years of simple, reliable operation

2. Features

- Complete two-way node in minimum size.
- Wall mountable chassis
- Forward signal bandwidth of 53 to 1000 MHz.
- SC/APC Input and Output for efficient, easy interconnection to your network.
- Standard 75-ohm female F-connector for RF forward output/reverse input.
- Superior RF connection return loss.
- 25 dBmV output level drives many downstream devices.
- Superior RF signal performance based on GaAs technology.
- Powering via local mains power AC using supplied adaptor or via coax carried power solution.
- Low operating power requirement.
- LEDs monitor presence of optical signals.
- Test points are provided to monitor optical signal levels.

Chapter 2

Specifications

1. Receiver Optical Performance

SPECIFICATION	LIMITS
Wavelength	1290 to 1600 nm
Input Level	-6 to 2 dBm (0.25 to 1.6 mW)
Input Connector	SC/APC
Optical Return Loss	> 45 dB

2. Receiver RF Performance

SPECIFICATION	LIMITS
Frequency Range	53 to 1000 MHz
RF Frequency Response (Flatness)	± 0.5 dB
Output RF Level	> 25 dBmV @ -1dBm Optical Input
Composite Second Order (CSO)	<-65dBc*
Composite Triple Beat (CTB)	<-67dBc*
CNR	>51dB
Output Return Loss	> 16 dB typ. 53-860 MHz
Connector	F-Connector, Female
Impedance	75 ohm
RF Output Test Port Level	-20 dB ± 1 dB from Input

* Loaded with 78 Analog Channels, -1dBm Input

3. Reverse RF Performance

SPECIFICATION	LIMITS
RF Input Level	15 dBmV
Frequency Range	5 to 42 MHz
Frequency Response	< ± 0.5dB
Input Return Loss	> 16 dB (18 dB typ.)

4. Reverse Optical Performance

SPECIFICATION	LIMITS
Wavelength	1310 nm.
Output Level	0 dBm typ., - 3 to +3 dBm (0.5 to 2 mW)
Input Connector	SC/APC
Optical Return Loss	> 45 dB

5. General

SPECIFICATION	LIMITS
Input Power	12-15 Vdc, 350~400 mA watt typ.
Power Connections	<ol style="list-style-type: none"> 1) Dedicated female F-connector for use with supplied AC adaptor 2) DC power extraction for female f-connector RF port for use with power on coax powering solution.
Temperature Range	-20 to +65°C on chassis base (+40°C max. recommended)
Relative Humidity (non-condensing)	0 to 95%
Altitude	0 to 15,000 ft
Weight	0.75 lb.
Size	4.4"H x 5.2"W x 1.35"D

Chapter 3

Installation and Operation

1. Unpacking the Unit

Please inspect the cartons on receipt and note damage to the carton and inspect for possible unit damage. If damage is found, please contact shipper immediately, before unpacking, to follow that shipper's procedure for claims.

Please open the carton and unpack carefully. Locate items such as the owner's manual and power cord. Do not connect a unit to power if there is serious mechanical damage to prevent possibly unsafe conditions.

2. Before Mounting

The **PMN-1** Mini-Indoor Optical Node has no internal configuration switches and no internal user adjustments or controls. To prevent unsafe conditions, please do not open the unit. Opening the PMN-1 will also **void the warranty**.

3. Mounting

The **PMN-1** chassis is designed for installation on a wall or other suitable flat surface. We recommend an installation plan that puts the **PMN-1** chassis near the fiber and coax paths and routing power as required to that location either using the supplied adaptor or using your own DC coax powering solution.


The chassis base has two mounting ears, one on the upper right corner near the RF OUT connector and one at the lower left near the REVERSE TP. These semi-rectangular openings (slots) accept a #10 screw. The base is ½ inch thick; allow sufficient additional screw length to attach the Mini-node to the surface securely, typically 1 ¼ inch minimum. Anchors are recommended for drywall and other soft materials to prevent the screws from pulling out while tightening the F-connectors.

Some supplied power adaptors mount directly onto the wall socket for local AC power Mains; other adaptors may have detachable Mains power cords and must be positioned on a surface out of the way of traffic where they are not likely to be bumped and/or kicked.

3.1 Spacing and Cooling

The **PMN-1** node is very low power consumption so thermal dissipation is generally not an issue. The Mini-node will dissipate small amounts of heat into the surface to which it is attached and into the air. Do not attach to a surface that is heated by other equipment or processes. Do not restrict the airflow around the chassis by closely covering the unit. Do not position the unit where heat exhausted from other nearby equipment may adversely affect the unit.

4. Making Connections

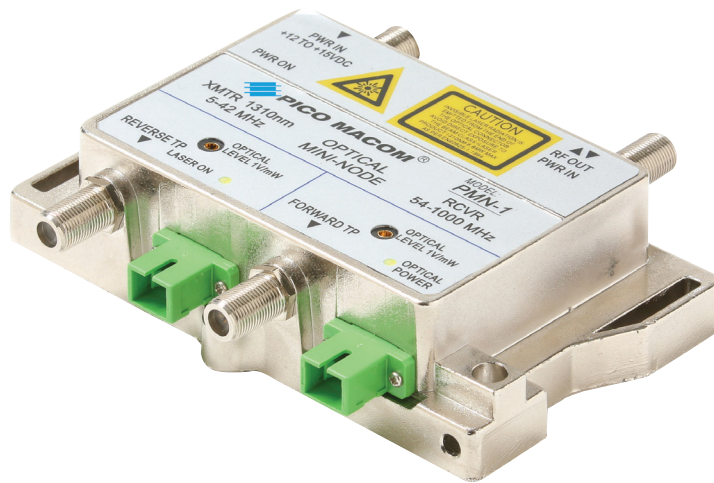

4.1 Power Adaptor Connection and Initial Power Up

If you have, and will use, a 12-15 Vdc power inserter that may be connected to the main RF coax, either locally or at the distant end of the coax, ignore the remainder of this section. Ensure splitters and other line elements are “power passing”. The **PMN-1** will extract the DC powering from the coax on the RF OUT port if present and no other power need be connected.

If using the supplied power adaptor, position the adaptor where AC mains power is available and route cabling to the Mini-node. Ensure the AC Mains powering matches the adaptor rating before connecting the cabling. Use professional tools to crimp the coax cable terminations; they must be well crimped to ensure reliable ground connections.

Connect the cable to the PWR IN F-connector in upper left corner of the Mini-node and snug firmly. If using a torque wrench, tighten to 20 inch-pounds. Do not over-tighten.

Connect the power adaptor to the Mains power and observe the **LASER ON LED**. It will light if power is properly supplied.

If the **LASER ON** led fails to light, check presence and level of DC voltage at power adaptor and at cable connection to the Mini-node.

4.2 Forward Fiber Connection

- The fiber with the forward path signal must be terminated with a SC/APC connector or a SC/APC pigtail must be spliced onto the fiber. The SC/APC connector is a rectangular shaped green connector. Blue color SCUPC connector will fit in the Mini-node socket but do not transfer optical power effectively.
- Ensure that you have a fiber carrying less than 3 dBm power level before connecting to the Mini-node. Excessive power may damage the receiver. We recommend checking with an optical power meter with SC/ACP connection. If above 3 dBm, use an external optical attenuator (SC/APC female-male type) is needed to bring the level to approximately 0 dBm.
- When ready to make the optical connection, remove and retain the plug in the RCVR optical connector in the lower right corner.
- Prepare the fiber's connector by cleaning the optical tip. An example cleaner is shown below and is used by stroking the tip in one direction only on the cleaning material. Isopropyl alcohol and lint-less cleaning wipes are also suitable. Do not use cotton cloth or swab due to lint. Failure to clean the fiber cables inserted into the Mini-node will cause dirt to accumulate in the PMN-1 connector. This will decrease received optical power and degrade RF output.
- Hold the SC/APC fiber connector near the Mini-node bulkhead connector and align it with the bulk head connector. Note that one long side of the SC/APC fiber connector has an alignment rib or pin that matches with the slot in the bulkhead connector. Insert the fiber connector into the Mini-node bulk head connector until it seats; the alignment rib should be near the end of the slot and the fiber connector aligned squarely with the bulkhead connector.
- Clean the fiber's connector each time it is reinserted into the Mini-node

FAILURE TO CLEAN THE FIBER CABLES BEFORE INSERTION INTO THE MINI-NODE IS CONSIDERED ABUSE AND REPAIRS DUE TO DIRTY CONNECTORS ARE NOT COVERED UNDER WARRANTY.



*Example of a fiber cable cleaner
(source: Fiber Instrument Sales, www.fiberinstrumentsales.com).*

- If optical power is present on the fiber, the OPTICAL POWER LED will be on.
- Check received optical power by using a voltmeter between the chassis and the OPTICAL LEVEL test point near the OPTICAL POWER LED.
- The scale is 1 V/mW, so the target input should be 1 V.
- If the voltage measures more than 2V, the optical input power is more than 2mW (3dBm).
- If the voltage measures less than 0.25V, it means the optical input power is less than 0.25mW (-6dBm).

4.3 Coax Connection

At this point, you may connect a coax cable to the RF OUT port and then to the local coax distribution system (splitters, combiners, amplifiers, etc.) to provide this output to the end user.

You may wish to test the output on a local television as a monitor initially before connecting to the distribution system but you will have to use the RF TEST port which is 20 dB lower than the RF OUT or use 20-25 dB attenuation between the RF OUT and the television. (Many televisions expect +5dBmV as the highest signal level they will receive, so the 25 dBmV output must be reduced.) When finished with testing the RF OUT port signal, remove any undesired attenuation and connect this port to the distribution system.

4.4 Return Optical Connection

You may omit connecting a return path fiber and the Mini-Node will operate satisfactorily as a one-way forward-only (downstream only) node. Assuming you wish two-way (forward and return) operation, continue as follows:

- The fiber with the return path signal must be terminated with a SC/APC connector or a SC/APC pigtail must be spliced onto the fiber. The SC/APC connector is a rectangular shaped green connector. Blue color SC/UPC connector will fit in the Mini-node socket but do not transfer optical power effectively and may damage the PMN-1 node.
- When ready to make the optical connection, remove and retain the plug in the LASER OUT optical bulkhead connector near the edge of the node. Retain these plugs and reinstall when fiber connectors are not installed to maintain cleanliness of the optical bulkhead connectors.
- Prepare the fiber's connector by cleaning the optical tip. An example cleaner is shown above and is used by stroking the tip in one direction only on the cleaning material. Isopropyl alcohol and lint-less cleaning wipes (Kimwipes) are also suitable. Do not use cotton cloth or swab due to lint. Failure to clean the fiber cables inserted into the Mini-node will cause dirt to accumulate in the PMN-1 connector. This will decrease transmitted optical power and degrade RF output at the distant receiver.
- Clean the fiber's connector each time it is re-inserted into the Mini-node.
- Hold the SC/APC fiber connector near the Mini-node bulkhead connector and align it with the bulkhead connector. Note that one long side of the SC/APC fiber connector has an alignment rib or pin that matches with the slot in the bulkhead connector. Insert the fiber connector into the Mini-node bulkhead connector until it seats; the alignment rib should near the end of the slot and the fiber connector aligned squarely with the bulkhead connector.
- Confirm that the LASER ON LED is lighted as a general check.
- Check transmitted optical power if desired by using a voltmeter between the chassis and the LASER POWER test point near the LASER ON LED.
- The scale is 1 V/mW, so the target input should be 1 Vdc.

If the optical output level is not at or near the target level of 1 mW (1 Vdc), check the REVERSE TP level with RF tools (spectrum analyzer or power meter). It should be 15 mV; if not adjust the distribution system sources to bring the input to the target

- If the voltage measures more than 2Vdc, the optical input power is more than 2mW (3dBm), i.e., offscale high.
- If the voltage measures less than 0.25Vdc, it means the optical input power is less than 0.25mW (-6dBm), i.e., off-scale low.

5. Maintenance

The **PMN-1** node contains no internal user adjustments.


The most likely cause of decreased performance that may be addressed by users is contamination in the SC/APC connector(s). The optical fiber connectors may be contaminated by the slightest touch to human skin or other apparently clean surfaces. This contamination is transferred in to the bulkhead connector and remains when the fiber connector is removed. Over time, this will cause decreased and intermittent output levels. Users may correct this condition as follows using commonly available fiber cleaner kits. One possible source is www.fiberinstrumentsales.com.

1. Remove fiber connector from the SC/APC bulkhead connector on the Mini-node.
2. Clean bulkhead connector using standard fiber cleaning tools such as Optipop 2.5mm stick cleaner. Slide stick into the bulkhead and scrub contamination of the bulkhead. In the absence of commercial cleaning tools, a pipecleaner and isopropyl alcohol may be used. A less effective solution is to use canned (clean) air with nozzle to blow contamination out of the bulkhead.
3. Clean the connector plug and insert it into the bulkhead connector if a fiber connector is not to be used immediately. Or, clean the fiber connector using handheld fiber connector cleaner (as shown earlier in this manual) and insert directly into the bulkhead connector until fully seated.

Chapter 4

Block Diagram

The diagram below is for general information purposes to allow user to better understand the **PMN-1** node operation. There are no internal user adjustments or repairs possible. The ATT and EQ shown in the block diagram are factory tuning adjustments and fixed at the factory. These are not available for users to change.

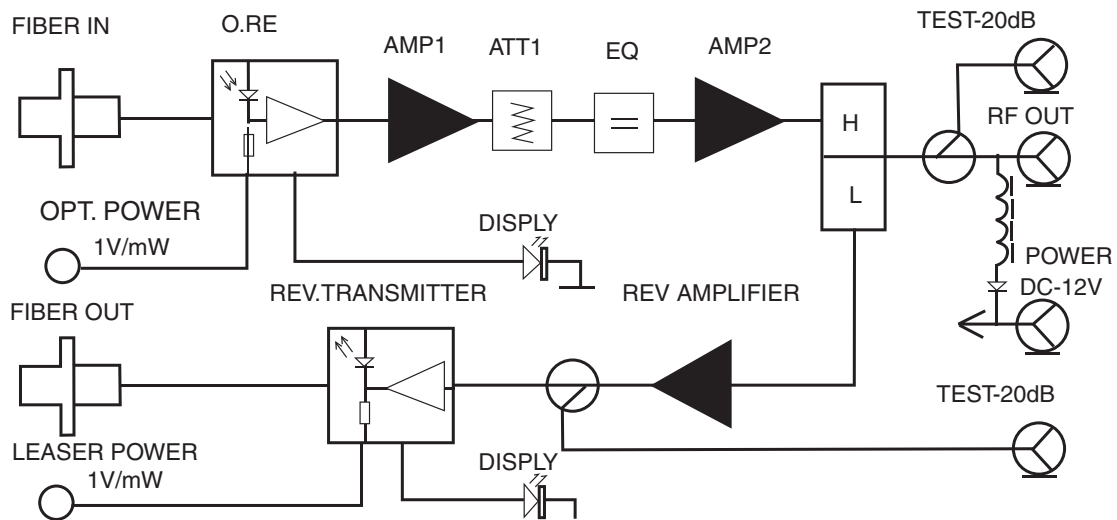

Warranty

Limited Warranty



Pico Macom warrants to the original purchaser that all of its new products are of sound design, quality materials and workmanship at the time of manufacture and will be free from related defects for one year from the original purchase date. Pico Macom will repair or, at its discretion, replace without cost to the original purchaser, the product which, upon inspection by Pico Macom, appears to be defective or not conforming to factory specifications. Pico Macom will cover the cost of parts, labor, and return freight from factory.

Warranty Limitations

This warranty excludes coverage of damage or inoperability resulting from (1) use or installation other than in strict accordance with Pico Macom's written instructions, (2) disassembly or repair by someone other than Pico Macom or a Pico Macom authorized repair center, (3) misuse, misapplication or abuse, (4) alteration, (5) lack of reasonable care or (6) wind, ice, snow, rain, lightning, power surges, excessive heat, or any other weather conditions or acts of God. Pico Macom's warranty with respect to third-party proprietary sub-assembly modules and/or private-label products are limited to the duration and terms of third-party vendors' warranty. Pico Macom shall in no event and under no circumstances be liable or responsible for any consequential, indirect, incidental, punitive, direct or special damages based upon breach of warranty, breach of contract, negligence, strict tort liability or otherwise or any other legal theory, arising directly or indirectly from the sale, use, installation or failure of any product acquired by buyer from Pico Macom. This limited warranty extends to the original purchaser. Pico Macom reserves the right to modify or discontinue this warranty at Pico Macom's sole discretion without notification. No other warranties are expressed or implied.

Damage or Shortage Claims

Our shipping staff carefully packs and ships your orders in compliance with common carriers' requirements. Please make note of any obvious damage or shortage on the freight bill or carrier's receipt next to your signature. The carrier's agent must too sign acknowledging the loss. Failure to do so may result in the carrier's refusal to honor the claim. Please open your order immediately upon receipt to check for concealed damage and compare the packing list to the items shipped. If damaged, keep the original shipping cartons for possible inspection by the carrier. You must report claims for loss or damage within 3 days of delivery, while claims for erroneous charges or price corrections must be presented within 30 days of invoice date.

Returning Shipped Items

To return any shipped items, including those shipped for warranty repairs or credit, call our Customer Service desk to request a Return Merchandise Authorization (RMA) number. Please reference the original invoice number and purchase date, and product serial number (if any). Be certain to mark the RMA number on the package boldly and legibly. Unless we specify a different carrier, please ship your returned items to us via UPS freight prepaid and fully insured. If returned for credit, we will promptly process your request upon receipt of your return order.

Our Return Policy: Your Satisfaction Guaranteed

Our goal is your complete satisfaction. If for any reason, our products were not quite what you anticipated, simply call your customer service rep and we will be happy to assist you in replacing or returning the order. You may return current, non-discontinued items for full credit for up to 30 days from invoice date. Our requirements are simple: Excepting defective items, the products must be returned in their original packaging and in re-salable condition. Restocking fees may otherwise apply beyond this period or if products are not returned in their original condition. Please contact your customer service rep for more information.

*One-year warranty if sold outside U.S.A.



6260 Sequence Drive, San Diego California 92121
Sales: 800-421-6511 **Phone:** 858-546-5050 **Fax:** 858-546-5051
sales@picomacom.com www.picomacom.com