

TMMPS

Power Supply Unit for Mini Modular Products

User's Manual

Safety Instructions & Precautions

- Do not operate the Unit in high-humidity areas, or expose it to water or moisture. No objects filled with liquid should be placed on the device.
- Disconnect the unit from the wall outlet prior to cleaning. Use a light, damp cloth (no solvents) to dust or clean the product.
- Do not block or cover slots and openings in the Unit. These are provided for ventilation and protection from overheating. Never place the Unit near or over a radiator or heat register. Do not place the Unit in an enclosure such as a cabinet without proper ventilation.
- We strongly recommend using the enclosed ground wire connecting to the ground cable of your house/building to avoid voltage spikes or ground fault.
- Never insert objects of any kind into the Unit through openings, as the objects may touch dangerous voltage points or short out parts. This also could cause fire or electrical shock.
- **For using Mini Modular System's Products, space under and above Mini modular chassis is always necessary.**
- There are no user serviceable parts in this device. Repairs should only be made by qualified and factory authorized service providers or by the factory itself. Failing to follow these guidelines may void the warranty and could cause unsafe conditions.

The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert you to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock to persons.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN




The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER FROM THIS UNIT. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.


Instructions :

Front Panel

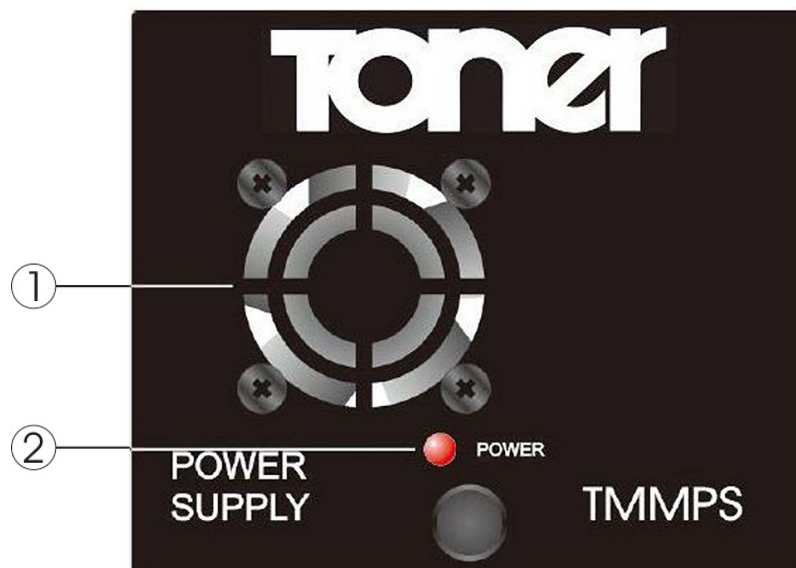

1. Ventilation Fan
2. Power LED Indicator

Rear Socket

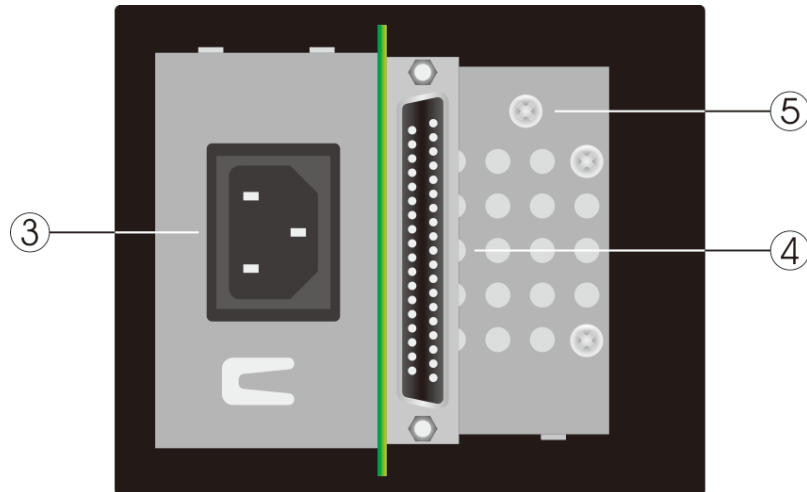

3. Power Supply AC Input
4. Harness for 12 Wires
5. Grounding for Chassis

Specifications :

- AC Input : 90-260V AC(50-60Hz)
- DC Output : 12V(4A) /5V(6.4A)
- Output with 12 Wires by 5/12V DC each
- Harness wires each 7.6" to 20.4"
- Grounding connection with mini chassis
- Protection : Short Circuit & Overload
- Ripple : 100mVp-p(5V) / 120mVp-p(12V)
- UL Certificate
- Single unit: 3.3 lbs with box 11.8x7.8x6"